

OPEN FIRST!!

Parts list for Master set # 3-18115



1131 VIA CALLEJON, SAN CLEMENTE, CA 92673

Parts list:

Energy Suspension recommends that you **read over all the installation instructions** and parts list **before you start.**

Transmission mount:

- 1 - 1036 mount
- 1 - 15.810 backing plate
- 2 - 15.348 (7/16" lockwasher)
- 4 - 15.342 (7/16" flat washer)
- 2 - 15.530 (7/16"-14 x 1" bolt)
- 1 - 17112 installation instructions

Secondary transmission crossmember mount: (Note: some models do not have this crossmember)

- 2 - 1037 mount bushing
- 2 - 1038 mount bushing
- 2 - 15.253 (3/4"O.D. x 1/2"I.D. x 1.200" sleeve)
- 2 - 15.349 (2-1/4" O.D. x 1/2" I.D. washer)
- 1 - 17107 installation instructions

Front end control arm bushing set:

- 2 - 3217 lower control arm pivot bushing, frt pos
- 2 - "K" shell (use with bushing 3217)
- 2 - 15.045 (3/4"O.D. x 1/2"I.D. x 2.000 sleeve)
- 2 - 3015 lower control arm pivot bushing, frt position
- 2 - "C" shell (use with bushing 3015)
- 2 - 15.010 (3/4"O.D. x 1/2"I.D. x 2.425 sleeve)
- 1 - 17019 installation instructions

Rear end control arm bushing set:

- 4 - 3021 lower control arm pivot bushing
- 4 - "I" shell (use with bushing 3021)
- 4 - 15.010 (3/4"O.D. x 1/2"I.D. x 2.425 sleeve)
- 4 - 3232 thrust washer
- 1 - 17041 installation instructions
- use 17019 installation instructions

Rear panhard bar bushings set:

- 4 - 2042 pivot bushing
- 2 - 15.101 (3/4"O.D. x 9/16"I.D. x 1.875 sleeve)
- 1 - 17039 installation instructions

Front Swaybar endlink set :

- 8 - 4806 endlink grommets
- 2 - 15.021 (9/16"O.D. x 3/8"I.D. x 2.600 sleeve)
- 8 - 15.301 (cupped washer)
- 2 - 15.504 (3/8"-16 x 7" bolt)
- 2 - 15.701 (3/8"-16 nut)
- use 17039 installation instructions


Tie-rod boot sets:

- 4 - 13001 tie-rod boot set

Additional parts available for your vehicle:

Torque arm mount bushing: (helps eliminate wheel hop)

- 84-92 Torque arm mount bushing 3-1112
(Lips facing driveshaft) see diagram
- 84-92 Torque arm mount bushing 3-1111
(Lips facing away from driveshaft) see diagram
- 82-83 Torque arm mount bushing 3-1110

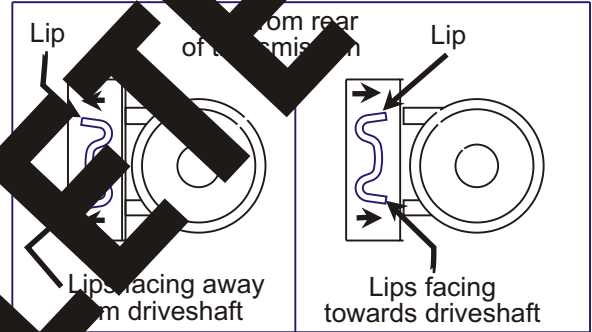

Torque Arm Bushing Diagram

Front swaybar frame mount bushing set:

1982-92 Front swaybar bushing set

Bar Dia.	Set #
30mm	3-5159
32mm	3-5130
34mm	3-5131

Rear swaybar bushing set (includes endlinks):

1982-96 Rear swaybar bushing set

Bar Dia.	Set #
19mm	3-5161
21mm	3-5145
23mm	3-5146
24mm	3-5147

Please refer to our newest catalog for more information on custom applications including bump stops, shock bushings, universal mounts, tie rod boots, ball joint boots, transmission mounts, etc. please ask to see our catalog at your place of purchase.